

HOTSPOT QUICK START GUIDE



Included in this case:

- Quick Start Guide
- Hotspot
- Cable & Charger

ABOUT HOTSPOTS

A portable Wi-Fi hotspot uses Wi-Fi to help you connect your devices to the internet without having to plug into anything.



Wi-Fi hotspots can connect to Chromebooks, iPads, tablets, laptops, smartphones and other devices that require internet connectivity.

POWERING ON

To wake the hotspot display, press and release the Power button on the front of the device.



If the device is off, press and hold the Power button on the front of the device for 2 seconds until the display screen turns on.

If the device doesn't turn on, plug it into a nearby outlet with the power cord until charged.



Power button

CONNECT TO Wi-Fi

The Wi-Fi is active when the **Network**  and **Wi-Fi**  lights are lit on the display screen.

In the Wi-Fi settings of your computer or device, choose the network name and enter the password when prompted. The network name and password can be found on the hotspot.


POWERING OFF

To power off the device, press and hold the Power button for 3 seconds.



Power button

CHARGING THE DEVICE

When the battery is critically low the charge indicator in the upper right of the display will appear red ().

The hotspot will need to be charged. Connect the USB cable to the hotspot charging port and plug the other end into the appropriate electrical outlet. Keep the device plugged in for at least an hour.

Need Help Using Your Hotspot?

Contact a librarian at Everett Public Library:

425-257-8000

10am - 6pm

Tuesday-Saturday

libref@everettwa.gov

HOTSPOT QUICK START GUIDE



Included in this case:

- Quick Start Guide
- Hotspot
- Cable & Charger

ABOUT HOTSPOTS

A portable Wi-Fi hotspot uses Wi-Fi to help you connect your devices to the internet without having to plug into anything.



Wi-Fi hotspots can connect to Chromebooks, iPads, tablets, laptops, smartphones and other devices that require internet connectivity.

POWERING ON

To wake the hotspot display, press and release the Power button on the front of the device.



If the device is off, press and hold the Power button on the front of the device for 2 seconds until the display screen turns on.

If the device doesn't turn on, plug it into a nearby outlet with the power cord until charged.



Power button

CONNECT TO Wi-Fi

The Wi-Fi is active when the **Network**  and **Wi-Fi**  lights are lit on the display screen.

In the Wi-Fi settings of your computer or device, choose the network name and enter the password when prompted. The network name and password can be found on the hotspot.


POWERING OFF

To power off the device, press and hold the Power button for 3 seconds.



Power button

CHARGING THE DEVICE

When the battery is critically low the charge indicator in the upper right of the display will appear red ().

The hotspot will need to be charged. Connect the USB cable to the hotspot charging port and plug the other end into the appropriate electrical outlet. Keep the device plugged in for at least an hour.

Need Help Using Your Hotspot?

Contact a librarian at Everett Public Library:

425-257-8000

10am - 6pm

Tuesday-Saturday

libref@everettwa.gov